

NetworkSound, Inc

Yamaha AES DB25 Pin out

Pin # - Signal Name

| |
|----------------------|
| 1 Digital In 1/2 + |
| 2 Digital In 3/4 + |
| 3 Digital In 5/6 + |
| 4 Digital In 7/8 + |
| 5 Digital Out 1/2 + |
| 6 Digital Out 3/4 + |
| 7 Digital Out 5/6 + |
| 8 Digital Out 7/8 + |
| 9 No Connect |
| 10 Ground |
| 11 No Connect |
| 12 Ground |
| 13 Ground |
| 14 Digital In 1/2 - |
| 15 Digital In 3/4 - |
| 16 Digital In 5/6 - |
| 17 Digital In 7/8 - |
| 18 Digital Out 1/2 |
| 19 Digital Out 3/4 - |
| 20 Digital Out 5/6 - |
| 21 Digital Out 7/8 - |
| 22 Ground |
| 23 Ground |
| 24 Ground |
| 25 Ground |

There are 2 AES Db25 pin out standard. Yamaha and Tascam.

If you connect Yamaha – Yamaha AES DB25 – Then you need Db25 to Db25 AES cable

If you connect Yamaha – Tascam then you need Yamaha to Tascam cross cable

These cables are already available from Hosa, proco, whirlwind and mogami and others.